



NAVILOCK™



ADS-B 



Navilock GNS 5890 ADS-B MANUAL



1090 MHz





NAVILOCK™



Index

- Introduction
- Safety notices
- Package contents
- Specification
- System requirements
- Driver installation
- Software installation
- Compliance
- Final clause
- Copyright
- Remarks



NAVILOCK™



Introduction

The NAVILOCK GNS 5890 is the worldwide smallest ADS-B receiver with USB connectivity. All of our products are tested intensively before leaving the factory. Please read the following information carefully to ensure a problem-free operation and optimal functionality.

NAVILOCK GNS 5890 ADS-B Receiver is equipped with a high sensitive 1090 MHz ADS-B circuit.

The NAVILOCK GNS 5890 enables the utilisation of the virtual radar system ADS-B

Safety notices

- Safeguard the NAVILOCK GNS 5890 from moisture; observe the limits on operating and storage temperatures.
- Do not expose the NAVILOCK GNS 5890 to direct sunlight or heat.
- Do not open or modify. Failure to comply will result in the guarantee and warranty becoming void. There are no components inside that can be serviced by the user.
- Only connect the NAVILOCK GNS 5890 to the connector types described in these instructions.
- Be sure to respect the laws of the country you are in with respect to operation of devices.
- Do not operate the NAVILOCK GNS 5890 with a damaged cord or if the unit has dropped and/or has been damaged.
- This product is intended for operation with power from a USB power supply. Other usage is not recommended any may destroy the device. Please use only the original accessories.



NAVILOCK™



Package contents

- NAVILOCK GNS 5890 receiver
- Antenna (antenna base with rod antenna)
- CD with driver and software
- This user guide

Should anything be missing, please contact your dealer.

Specification

- Support ADS-B 1090 MHz

System requirements

- Windows 2000/XP/Vista
- PC or Notebook with free USB 2.0 Port
- Pentium 4,
- 512 MB RAM
- VGA Graphics card

Driver Installation

- Switch on your computer.
- Connect the antenna to the ADS-B receiver
- Connect the ADS-B receiver to a free USB port of your computer
- Afterwards, Windows displays the Hardware wizard
- Install the NAVILOCK GNS 5890 USB driver from the CD



NAVILOCK™



Compliance:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Final clause

Information and data contained in this manual are subject to change without notice in advance. Errors and misprints excepted.

Copyright

No part of this manual may be reproduced, or transmitted for any purpose, regardless in which way or by which means, electronically or mechanically, without explicit written approval of Navilock.

The software ADSBscope and parts of the firmware are
© by Jörg Bredendiek licensed under GNU GPLv2 only.

Remarks

For best reception the antenna must have direct view to the sky. The NAVILOCK GNS 5890 is also compatible to Planeplotter.

www.coaa.co.uk/planeplotter.htm

Settings as AVR receiver



NAVILOCK™



Support Navilock

If you have further questions, please contact our customer support
support@navilock.de.

You can find current product information on our homepage: www.navilock.com.
phone: +49 30 84716503 , mo. - fr. 09:00 a.m. - 04:30 p.m.

Final clause

Information and data contained in this manual are subject to change without notice in advance. Errors and misprints excepted.

Copyright

No part of this user manual may be reproduced, or transmitted for any purpose, regardless in which way or by which means, electronically or mechanically, without explicit written approval of Navilock.

Edition: 01/2012



EU Import: Global Navigation Systems – GNS GmbH - Adenauerstr. 18, 52146 Würselen – Germany